



Electric Utility Service Equipment Requirements Committee

UTILITY: Roseville Electric
 CONTACT NAME: Augutin Murar
 PHONE NUMBER: 916-774-5648

Place an X in the appropriate box for each drawing: A = Acceptable C = Consult U = Unacceptable N/A = Not Applicable

Drwg	A	C	U	N/A	Explain C's
301	X				
301A	X				
301B	X				
302			X		
302A	X				
302B			X		
303			X		
304	X				
305	X				
305A	X				
306	X				
307			X		
308	X				
308A	X				
309	X				
311	X				
312	X				
313			X		
314			X		
315			X		
316			X		
317			X		
318			X		
319		X			Single Phase only Accepted
320		X			3 Ph 4-wire only Accepted
321		X			Single Phase only Accepted
322	X				
323			X		
324	X				
325	X				
326	X				
327	X				
328A			X		
328B			X		
329A			X		
329B			X		
330	X				
331	X				
332	X				
333			X		
336			X		
337			X		
338			X		
339			X		
341					
342			X		

Drwg	A	C	U	N/A	Explain C's
343			X		
343A			X		
344			X		
345	X				
346					
347	X				
348	X				
349			X		
350					
351			X		
352					
353			X		
354	X				
401	X				
402					
403					
404			X		
405					
406					
407	X				
408			X		
409		X			Consult
410					
411			X		
412					
413					
414			X		
415					
416			X		
417					
418	X				
419					
420			X		
501			X		
502			X		
503			X		
515			X		
516					
517					
518					
519					
G1		X			Delta not accepted
G2			X		
G3		X			Main Breaker required
G4			X		
G5			X		

RE	CHANGE	BY	DSGN	APPV	DATE	REV	CHANGE	BY	DSGN	APPV	DATE
A						D					
B						E					
C						F					

SHEET 2 OF 2	Indicates Latest Revision	X	Completely Revised	New Page	Information Removed	E-2
	EUSERC MANUAL					
	SECTION 200					